

MANUALE: RFID CENTRALINA LETTORE DI PROSSIMITA + 10 CHIAVI per PORTA SERRATURA ELETTRICA

An initial password for Programming is 990101.

1 - ENTER INTO THE PROGRAMMING MODE

Press (* password(990101) #) to enter into programming mode.

Press (**) to exit programming mode.

Note: please exit the programming mode after finished a setting

2 - INCREASE A CARD FUNCTION SETTINGS

① Increase the management card:

Press (* 990101 # 14 #) → increase master card → i #

Press (* 990101 # 24 #) → reading delete master card → i #

(Note: Please use the manage card which has finished setting to increase or delete cards)

② Fast way to add card:

Press (* 990101 # 15 #) → continuous reading card → # (Note: stop reading for 10 seconds can exit the programming mode automaticly)

③ Increase card by digit number:

Press (* 990101 # 12 #) → read card → three digit numbers(888) → read card 1 → #

(Note : If you want increase more than one card for room 888, then please read the rest cards after the step "#")

For example: three digit numbers(888) → read card 1 → # → read card 2 → # read card 3 → # read card 4 ...

④ Increase card by card number:

Press (* 990101 # 16 #) → press the rear eight numbers of card number → #

For example: the card number is 0088888888, enter into 88888888 will be okay

⑤ Increase a card with password:

Press (* 990101 # 11 #) → read card → Set a 4-8 numbers digit password → #

⑥ Increased an access password:

Press (* 990101 # 13 #) → press 4-8 numbers digit password → #

3 - REMOVE CARD SETTING

① Remove card by reading card:

Press (* 990101 # 17 #) → read card → #

② Remove card by card number:

Press (* 990101 # 18 #) → press the rear eight numbers of card number → #

③ Remove card by set number:

Press (* 990101 # 19 #) → # → three digit numbers → # (Note: All the card which corresponded will be removed)

④ Remove Personal Password:

Press (* 990101 # 22 #) → access password → #

⑤ Remove all the access Passwords:

Press (* 990101 # 23 #) (Note: All the access passwords will be removed)

4 - RESET

① By keys:

Press (* 990101 # 86 #) (Note: restore 990101 and all the datas will be restored)

② By button:

Press the RESET button one time → # → restore password 990101 (Note: The access password will not be removed)

Press the RESET button five times → # → restore password 990101 and all the datas will be removed

5 - OTHER OPTIONS

① Modify the initial password for Programming:

Press (* 990101 # 88 # new password # new password #)

② Modify the prolong access time:

Press (* # 25 #) → set a 3 numbers time like 0 0 3

(Note: The original prolong access time is three seconds. If you want to make it longer the max time you can set is 255 seconds)

③ Anti detection access password settings:

Press (* 990101 # 26 #) → set a correr number → set a two numbers lock time #